






**10 years
Product
Warranty**

Paintwork Check

For wooden windows and doors

Step 1: determine the load group

The load group results from the weathering situation to which the wooden parts are exposed after installation: type of installation, roof projection size and building position play a part in this.

Window installation type	Roof projection dimension	Ground floor and 1 st to 3 rd floors	Free-standing or hanging situation or from 3 rd floor	Mountainous or coastal region
Set back	Large 	0	0	1
Flush with façade		1	1	2
Set back	Medium 	1	2	3
Flush with façade		2	3	4
Set back	Small 	2	3	4
Flush with façade		3	3	4

According to the table „Paintwork groups for windows and outside doors“ of the „Institut für Fenstertechnik e.V.“, Rosheim

0	= Not directly weathered	1	= Slightly weathered	2	= Medium weathered
3	= Heavily weathered	4	= Very heavily weathered		

After identifying the load/exposure class above below table indicates the appropriate paintwork retouching that must be carried out during the period (in years).

After identifying the load/exposure class below table indicates the appropriate paintwork retouching that must be carried out during the period (in years).

Load class	Softwood					Tropical and hardwood				
	<i>transparent hues</i>			<i>opaque hues</i>		<i>transparent hues</i>			<i>opaque hues</i>	
	light	medium	dark	light / medium	dark	light	medium	dark	light / medium	dark
0	5	5	5	5	5	5	5	5	5	5
1	2	4	5	5	5	4	5	5	5	5
2	< 2	3	4	4	4	4	4	5	5	5
3	< 2	< 2	< 2	2	< 2	< 2	2	2	2	2
4	< 2	< 2	< 2	< 2	< 2	< 2	< 2	< 2	2	< 2